


AH





15186

V 12/15


ISTRUZIONI DI MONTAGGIO - NOTICE DE MONTAGE - ASSEMBLY INSTRUCTIONS







CA 8 	DA 8 	LE 2 	NA 4 	VJ 18 Ø4	
QTA 1 	QTB 1 	QTC 1 	QTD 2 	QTG 2 	VJB 4 Ø3.5
VM 8 3.5x25	QTE 2 	ZD 1 	VE 6 		

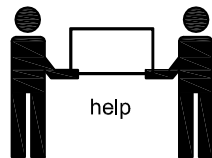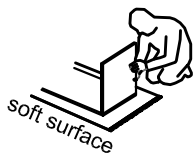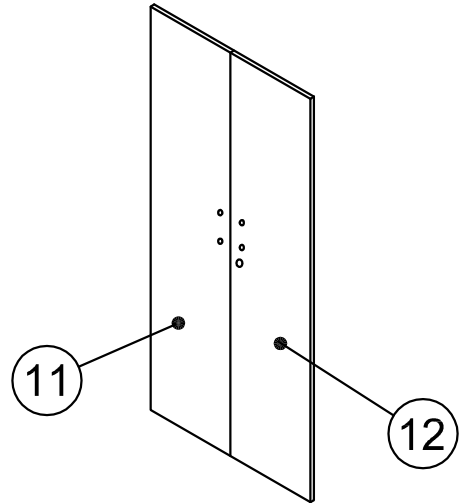



1

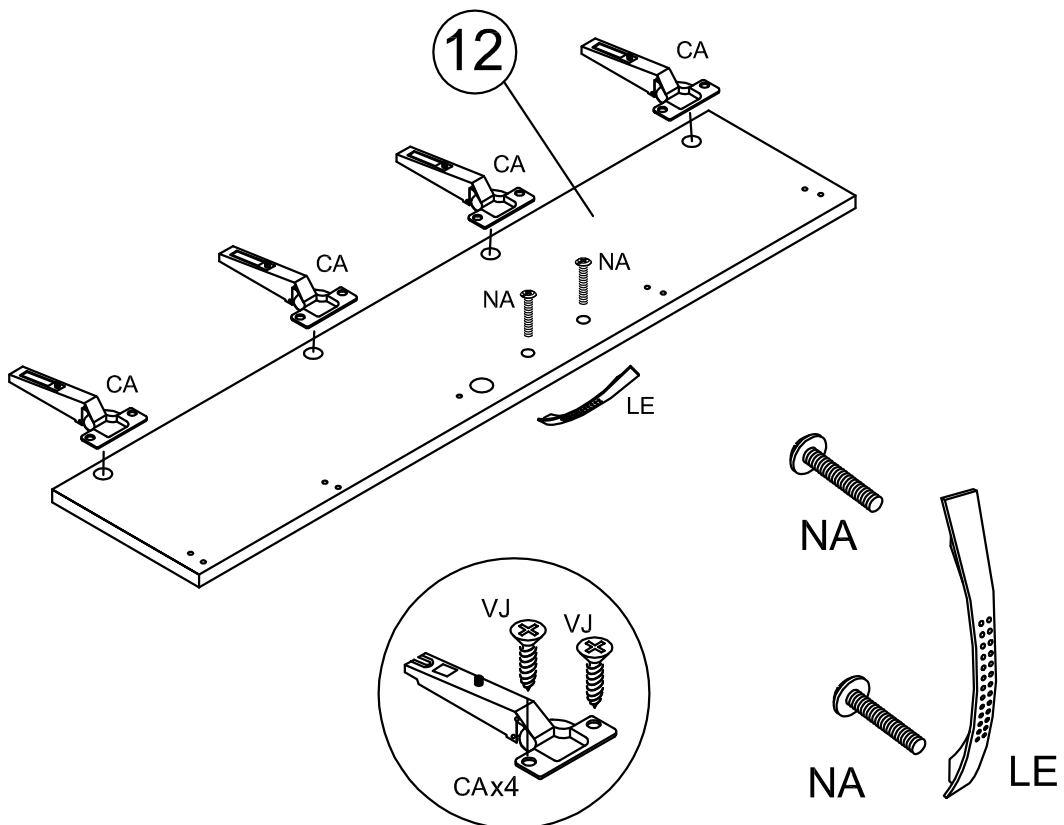


2

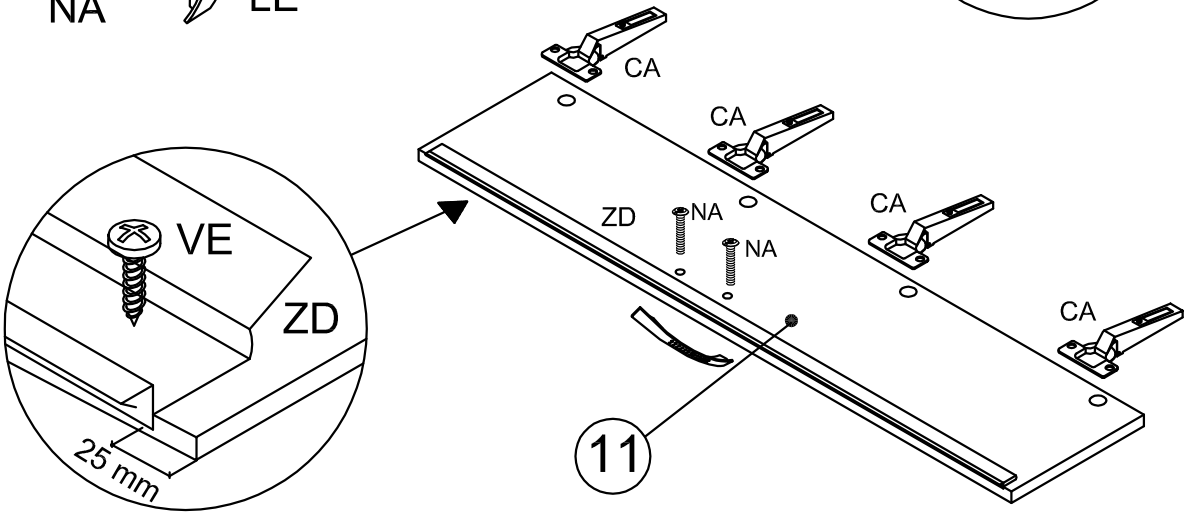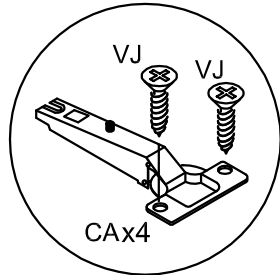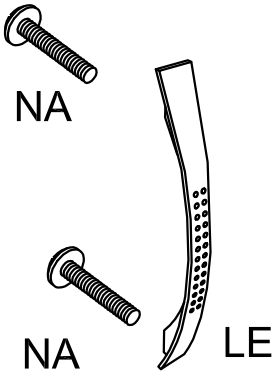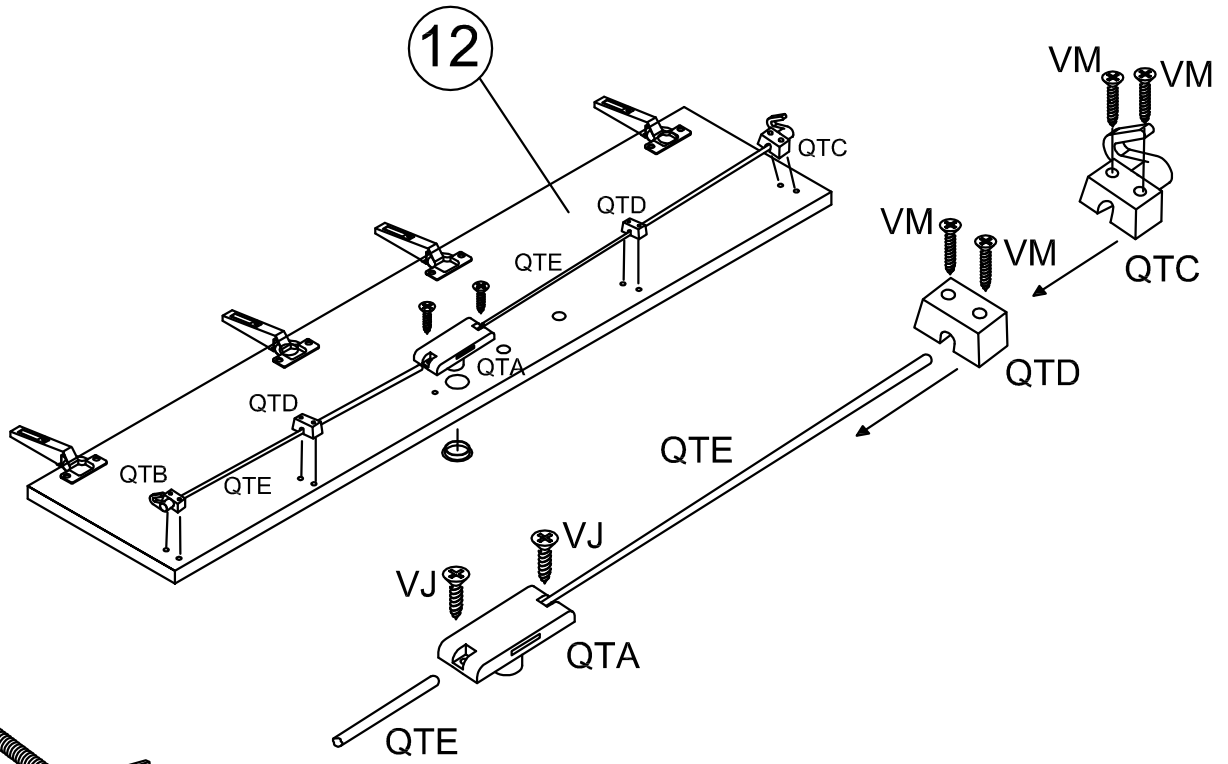

3

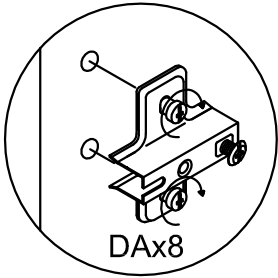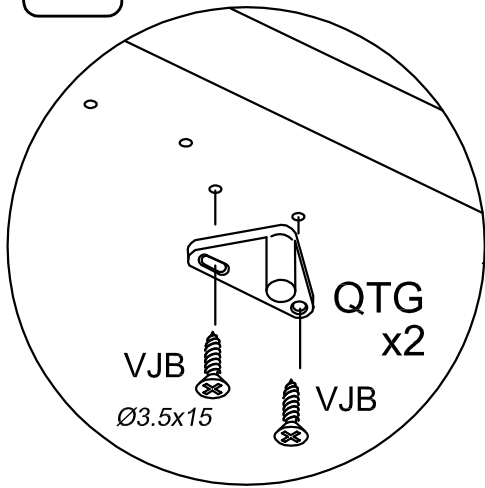


2

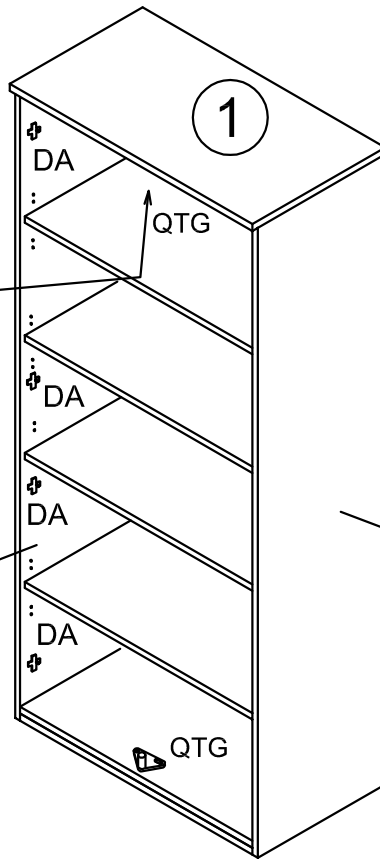


BH 15186

3

4

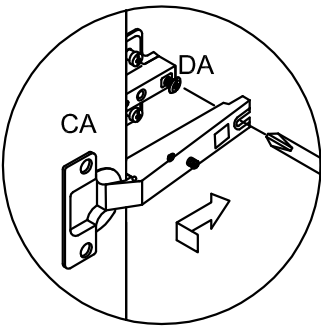

12

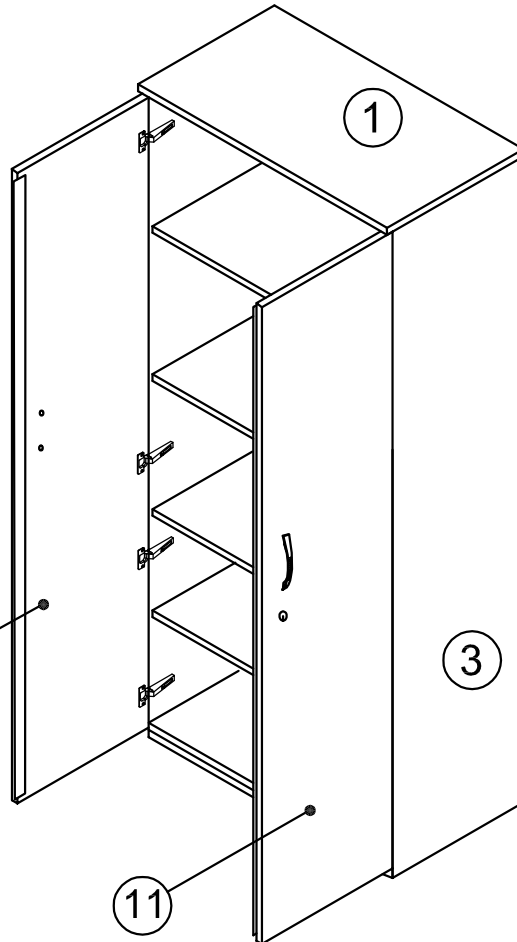

BH 15186

3

11