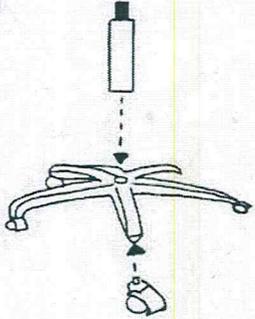
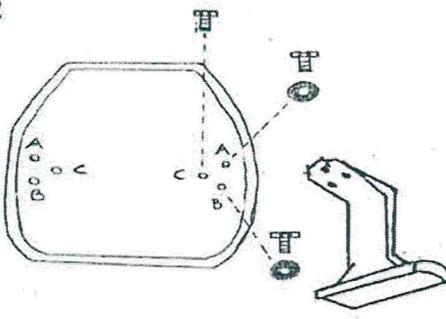
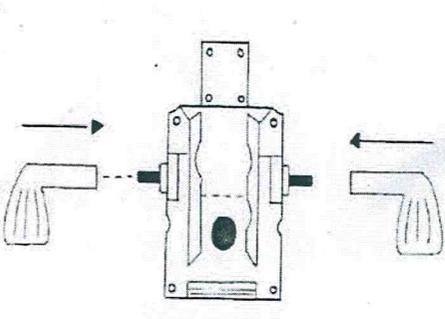
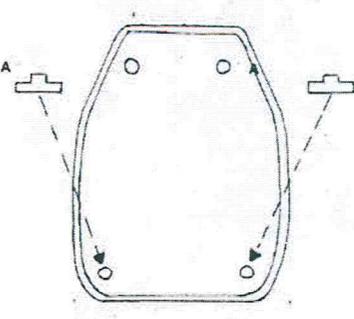
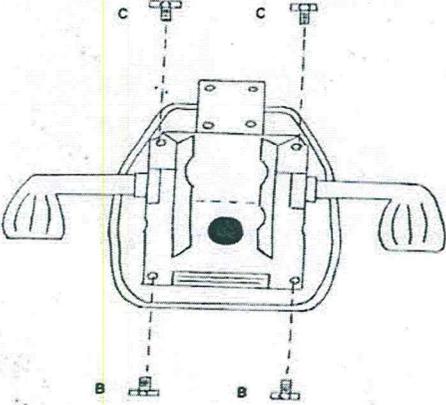
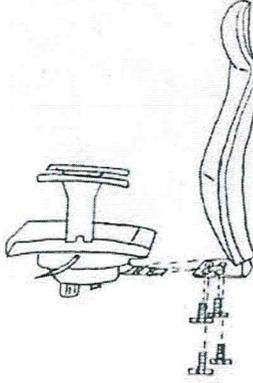


# ISTRUZIONI DI MONTAGGIO

# ASSEMBLY INSTRUCTIONS

**C41**

<p>1</p> 	<p>2</p> 	<p>3</p> 	<p>4</p> 
<p>5</p> 	<p>6</p> 	<p>7</p> 	<p>1- INSERT CASTOR AND GAS PUMP ON THE BASE                  2- ASSEMBLE ARM RESTS ON THE SEAT. BY FIRST PUTTING THE METAL WASHERS ON THE HOLES A &amp; B, THEN POSITION THE ARMS AND FASTEN THE THREE SCREWS                  3- INSERT THE 2 LEVERS OF THE MECHANISM IN THE DIRECTION AS SHOWN                  4- PUT THE TWO PLASTIC WASHERS (A) IN THE FRONT HOLES OF THE SEAT                  5- POSITION THE MECHANISM ON THE CORRESPONDENT HOLES IN THE SEAT. PUT SCREWS (B) ON THE FRONT AND SCREWS (C) ON THE BACK. THEN FIX THEM.                  6- FIX THE METALLIC BACK BAR ON THE MECHANISM USING THE 4 SCREWS SUPPLIED</p>

1- INSERIRE RUOTE E PISTONE NELLA BASE.

2- POSIZIONARE LE 2 RONDELLE IN CORRISPONDENZA DEI FORI A E B. POSIZIONARE IL BRACCIOLE E FISSARE LE 3 VITI

3- INSERIRE LE DUE LEVE NEL MECCANISMO NELLA DIREZIONE INDICATA.

4- POSIZIONARE I DUE DISTANZIALI (A) NEI FORI DELLA PARTE ANTERIORE DEL SEDILE.

5- POSIZIONARE IL MECCANISMO IN CORRISPONDENZA DEI 4 FORI DEL SEDILE. POSIZIONARE LE DUE VITI (B) NELLA PARTE ANTERIORE E LE DUE VITI (C) NELLA PARTE POSTERIORE. PROCEDERE CON IL FISSAGGIO.

6- FISSARE LA LAMA DELLO SCHIENALE SUL MECCANISMO CON LE 2 VITI.