


AH





15186

V 12/15


ISTRUZIONI DI MONTAGGIO - NOTICE DE MONTAGE - ASSEMBLY INSTRUCTIONS







CA 8 	DA 8 	LE 2 	NA 4 	VJ 18 Ø4	
QTA 1 	QTB 1 	QTC 1 	QTD 2 	QTG 2 	VJB 4 Ø3.5
VM 8 3.5x25	QTE 2 	ZD 1 	VE 6 		

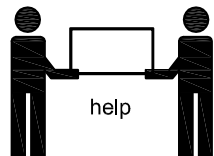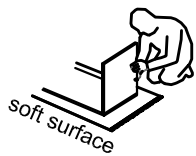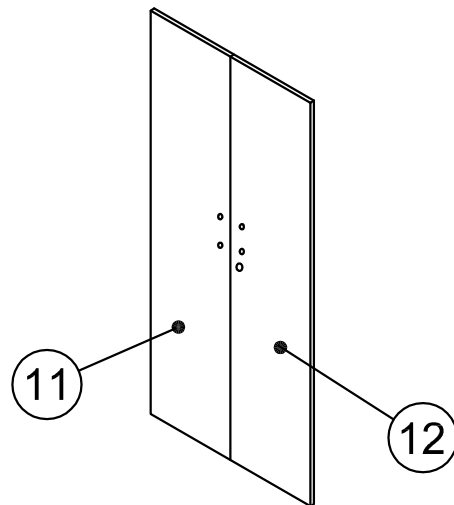

1


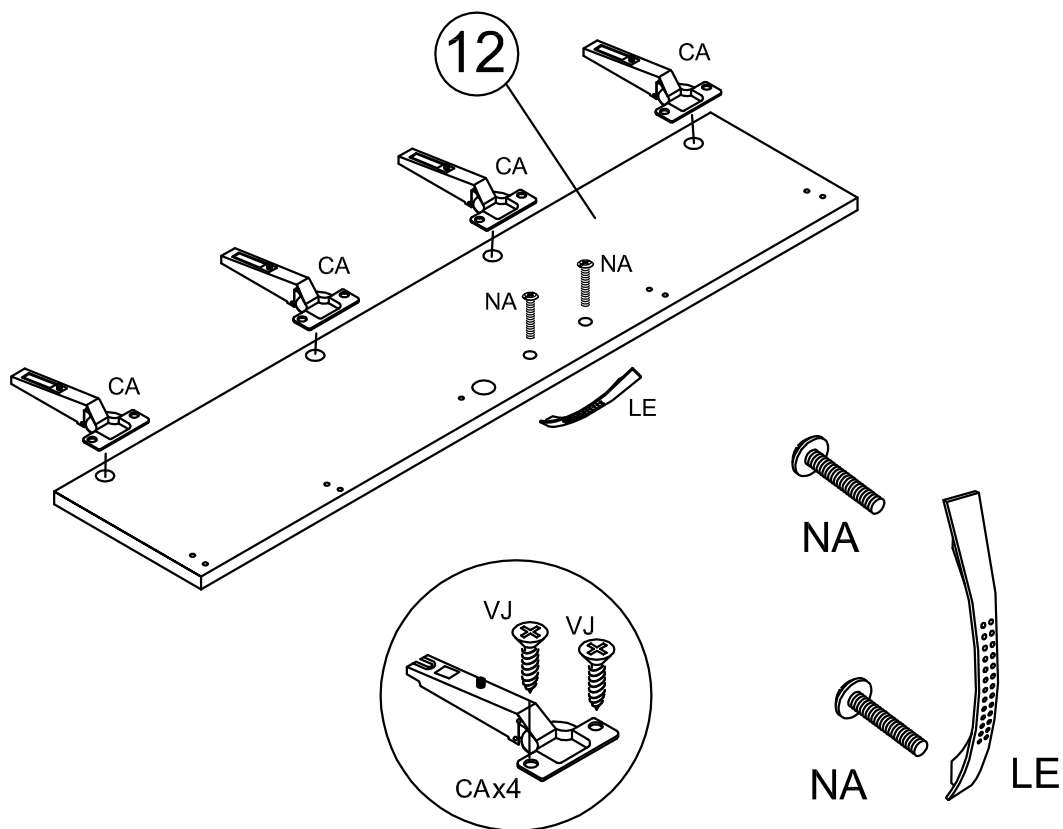


2

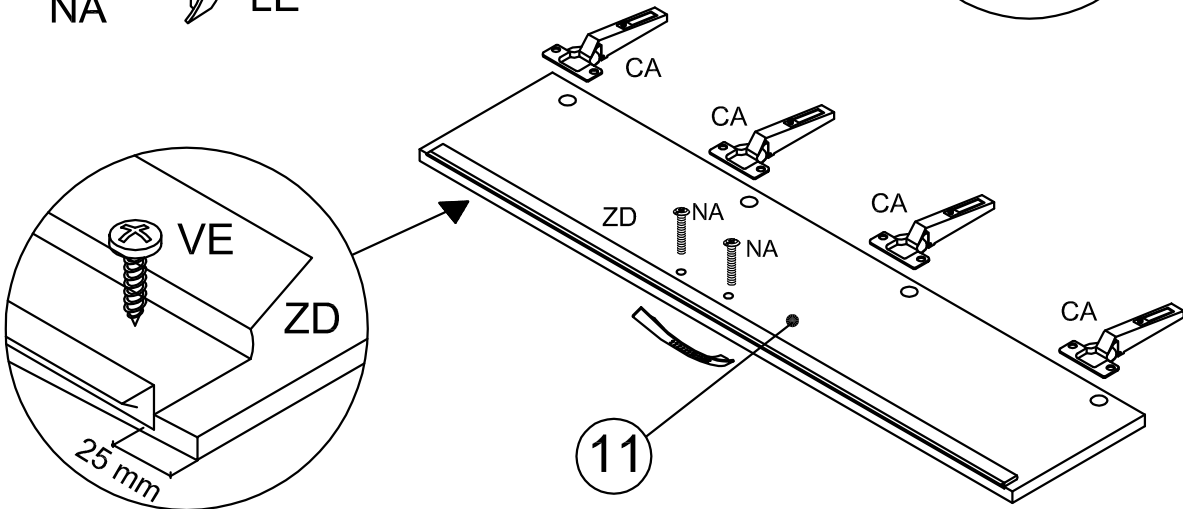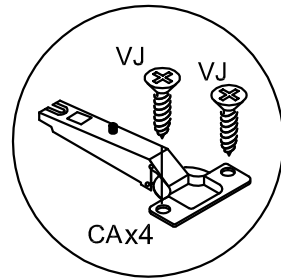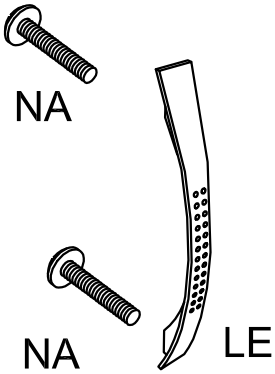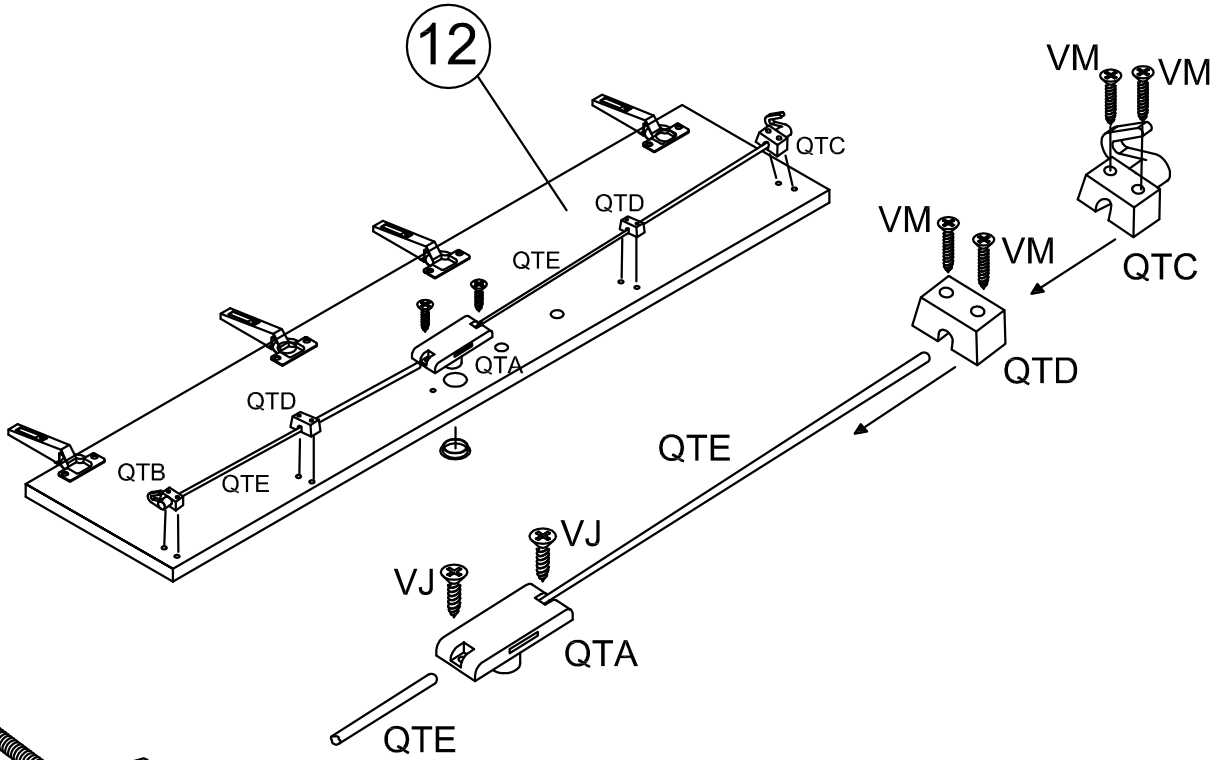


11


3

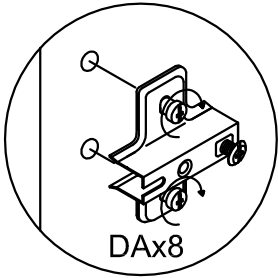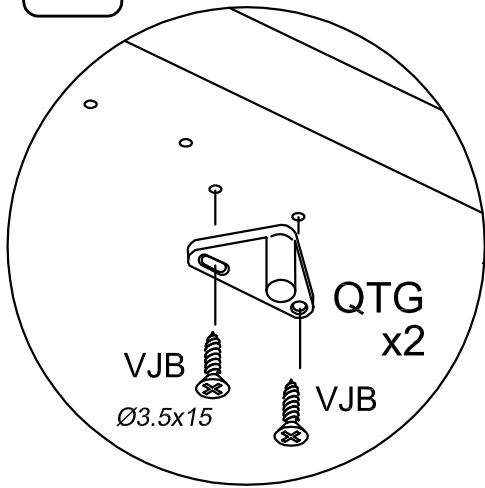


2

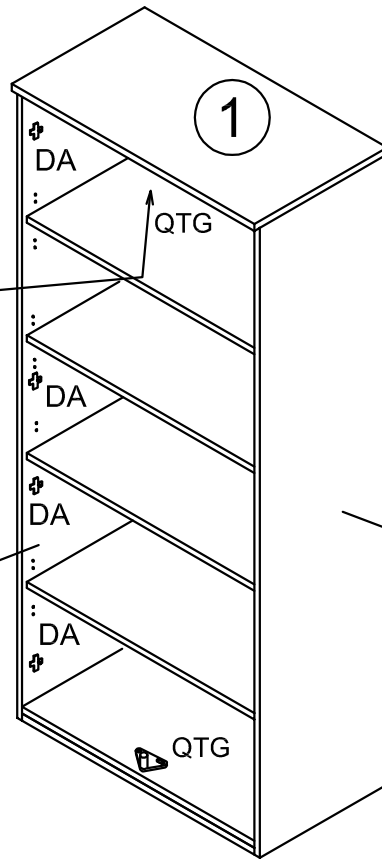

4


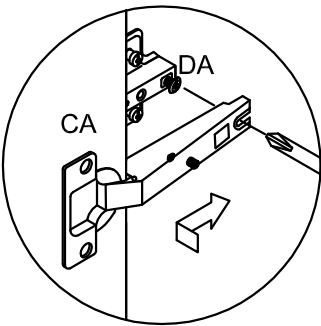


12










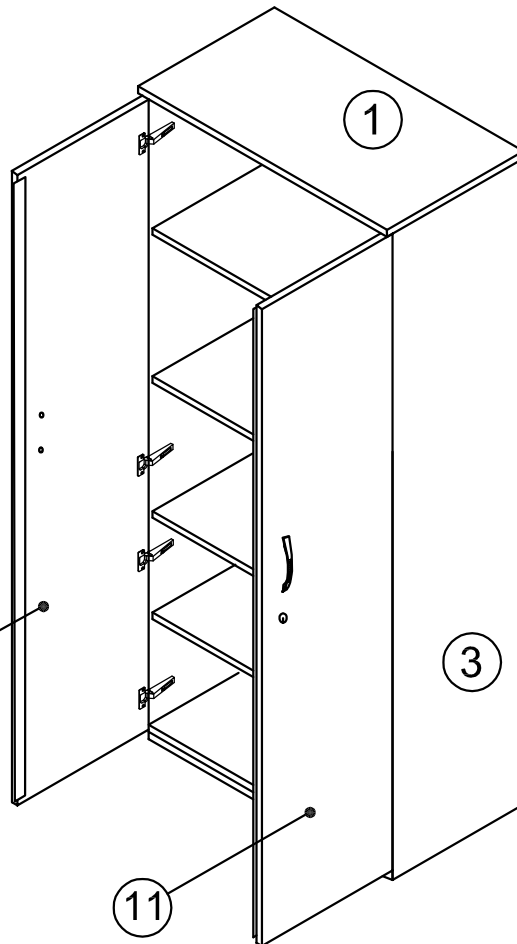


BH 15186



ISTRUZIONI DI MONTAGGIO - NOTICE DE MONTAGE - ASSEMBLY INSTRUCTIONS

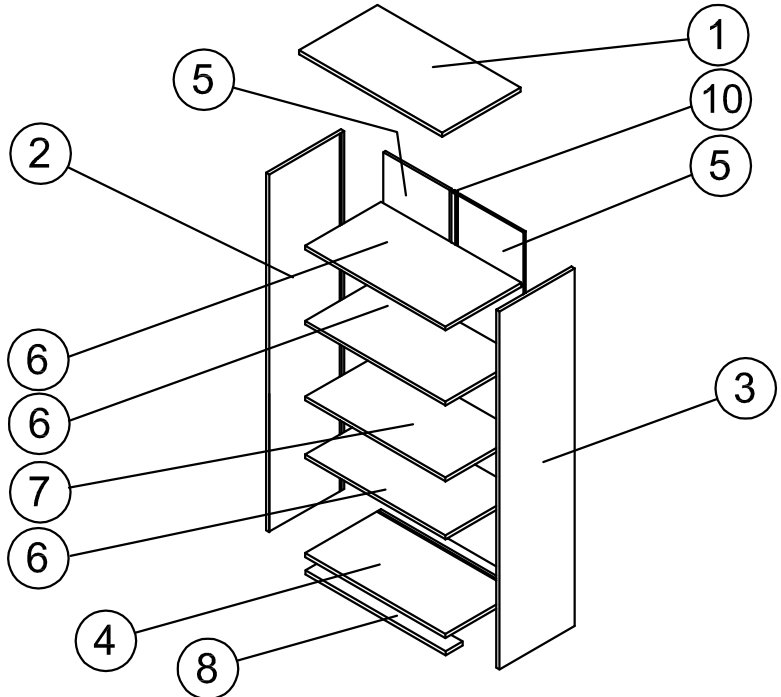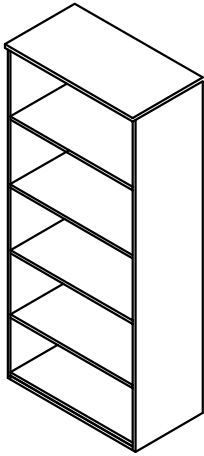


utensili necessari
 outils nécessaires
 tools required

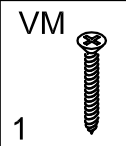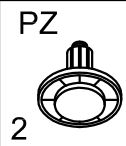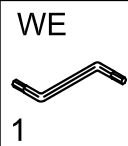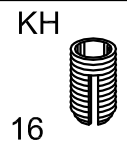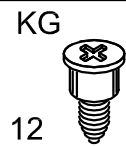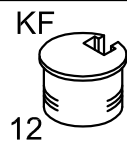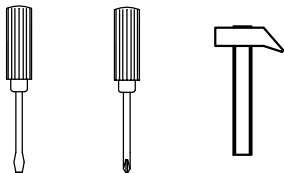






NOTES

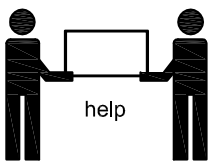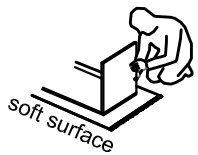




Instructions






1

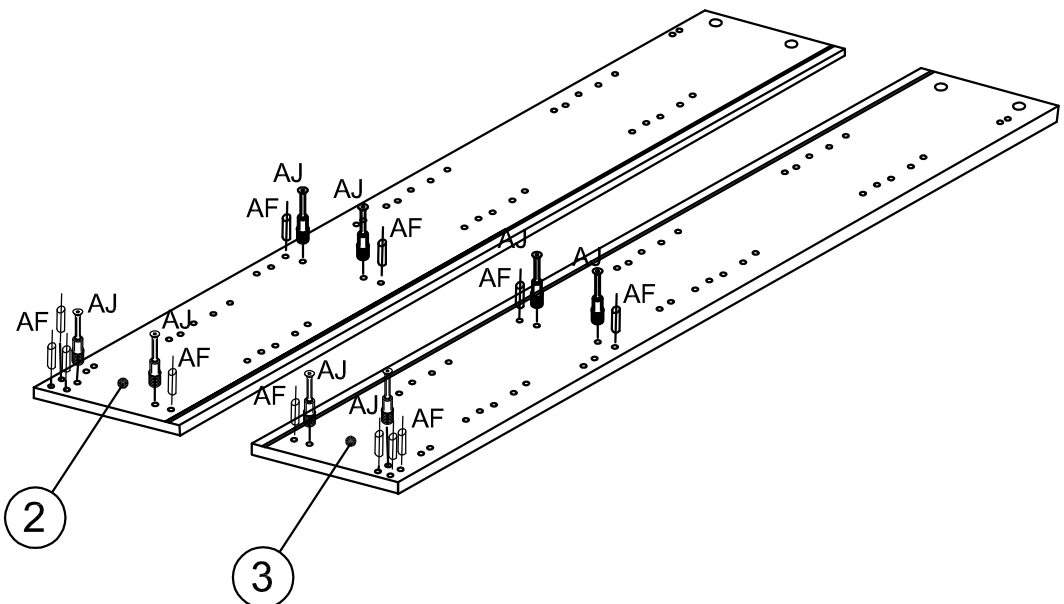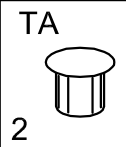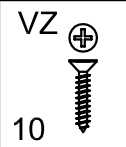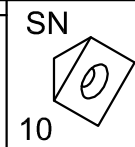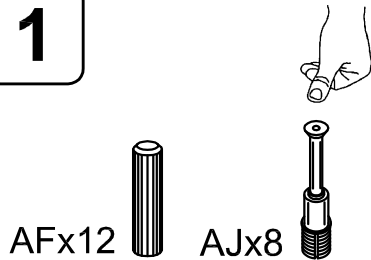


2

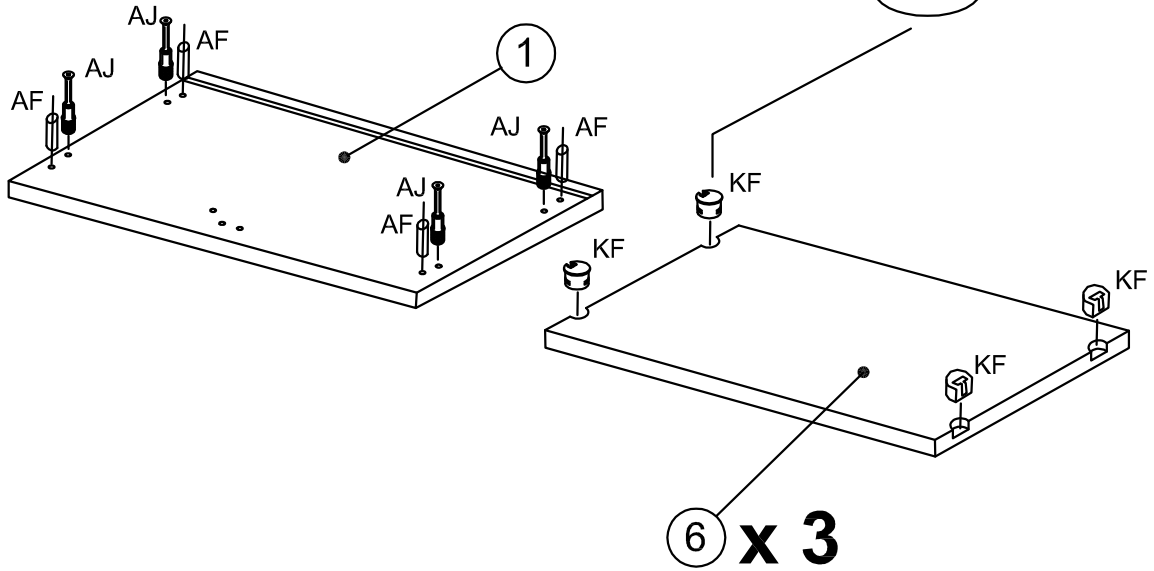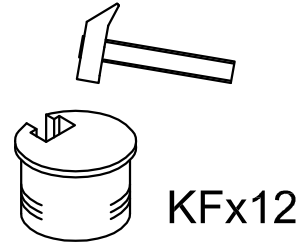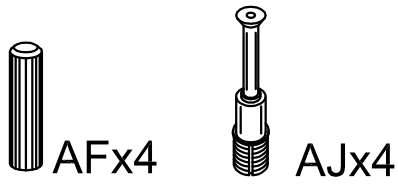


3

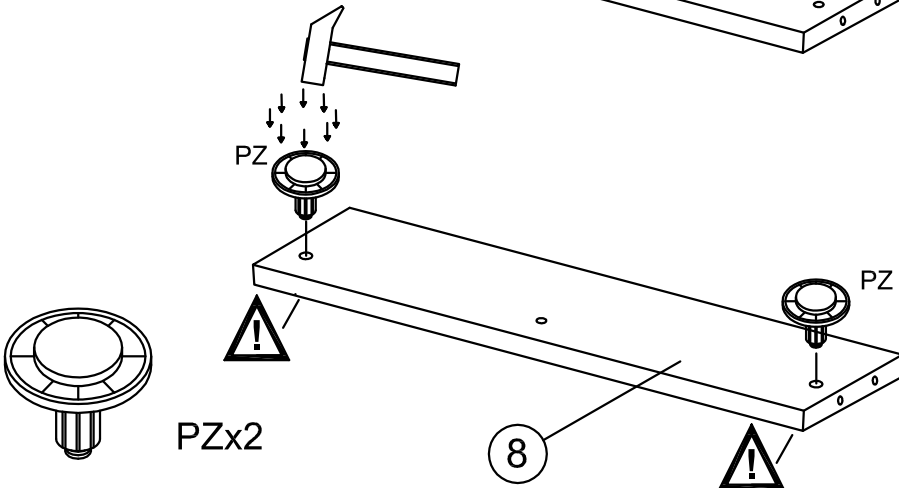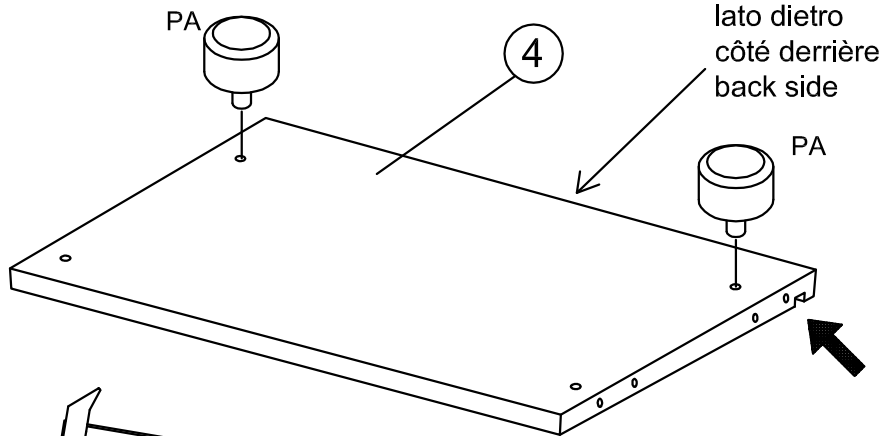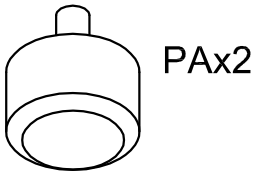




4

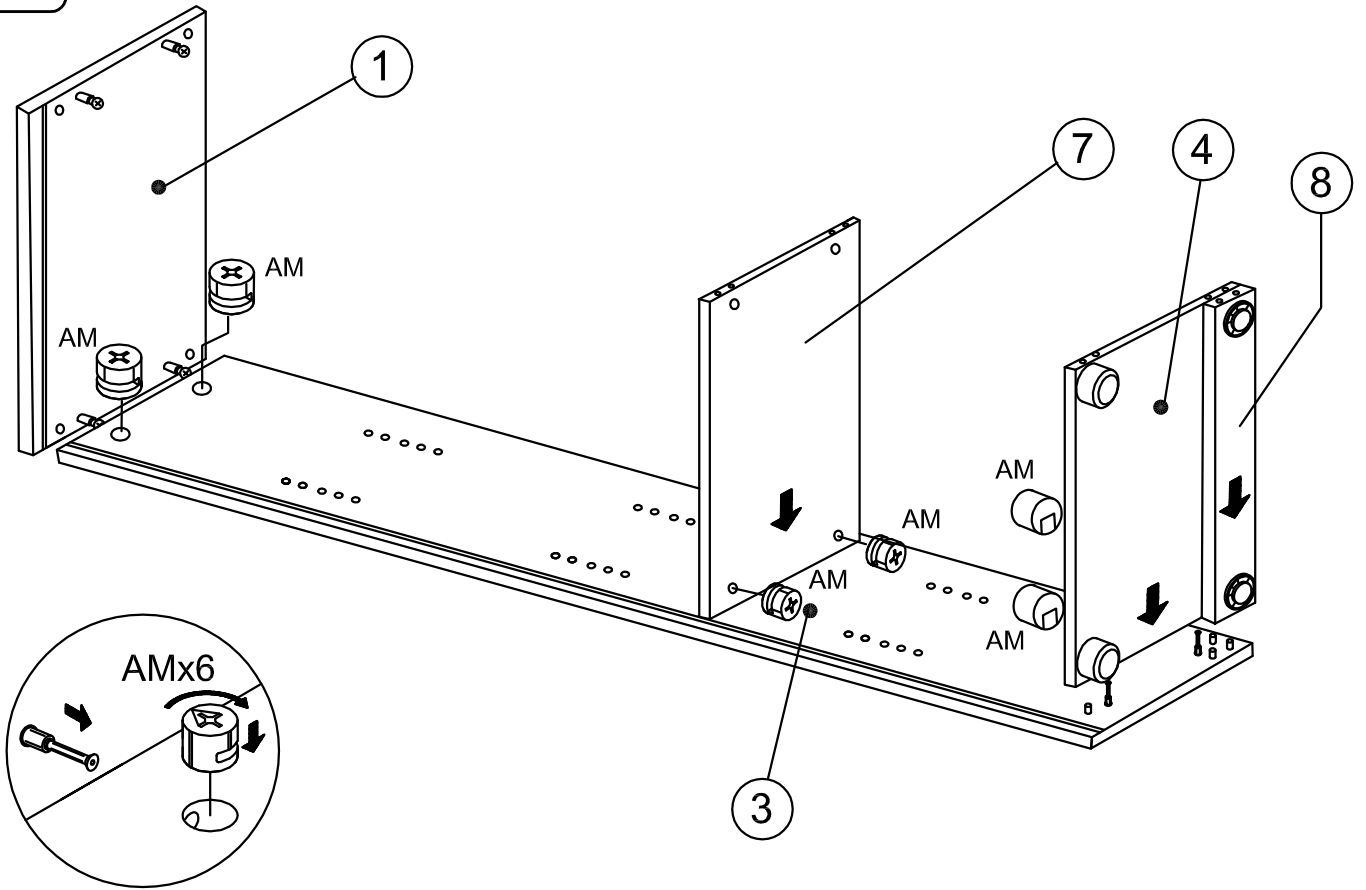

5

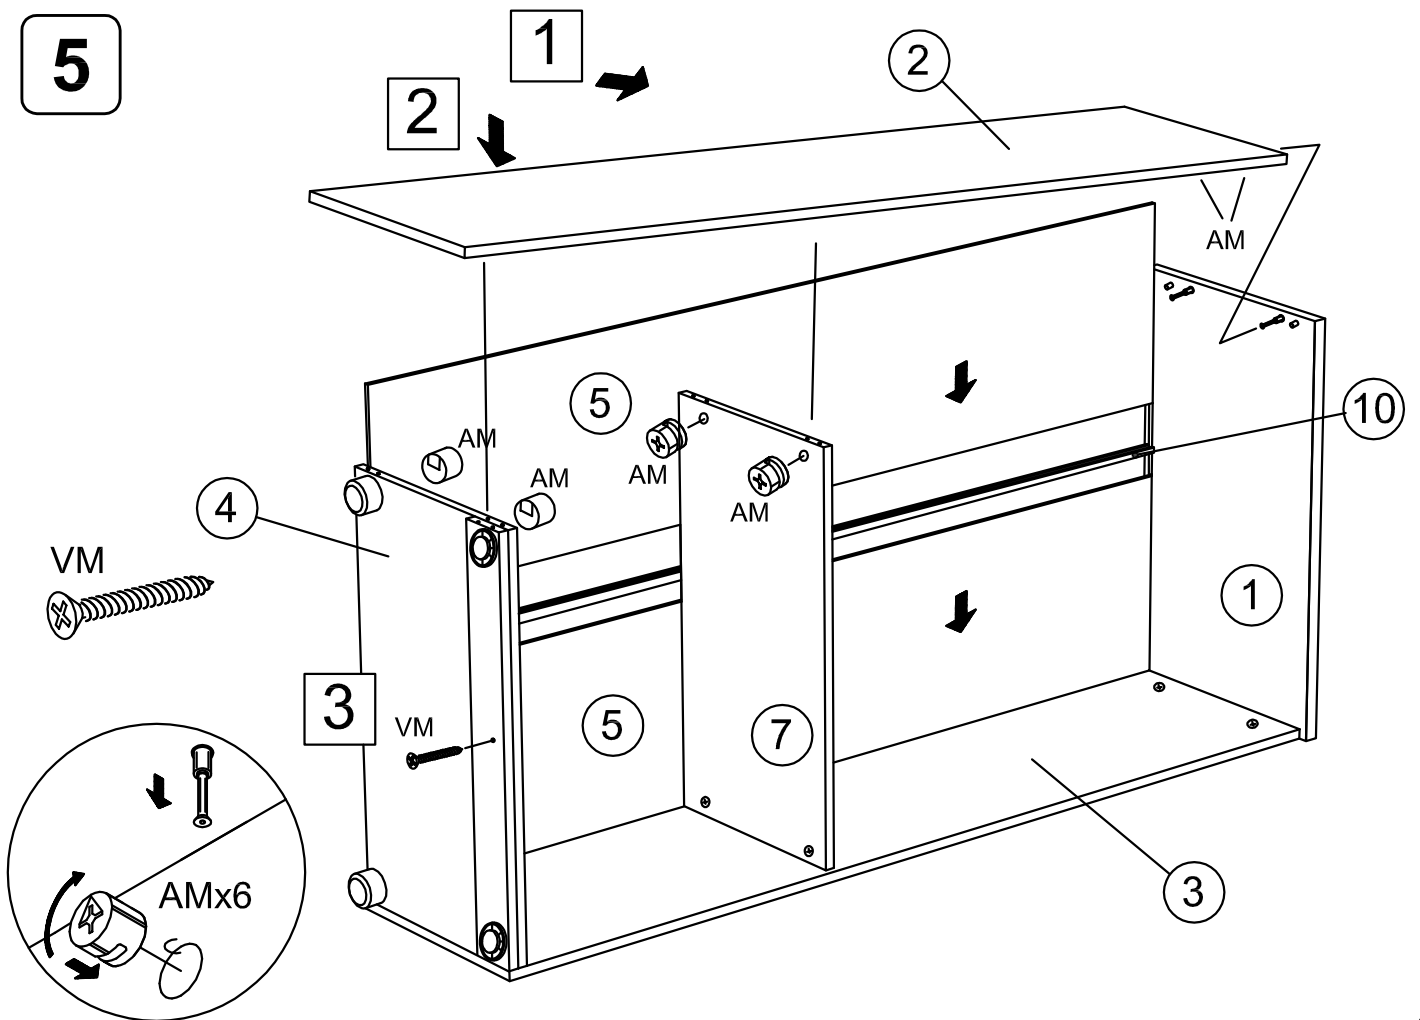

6

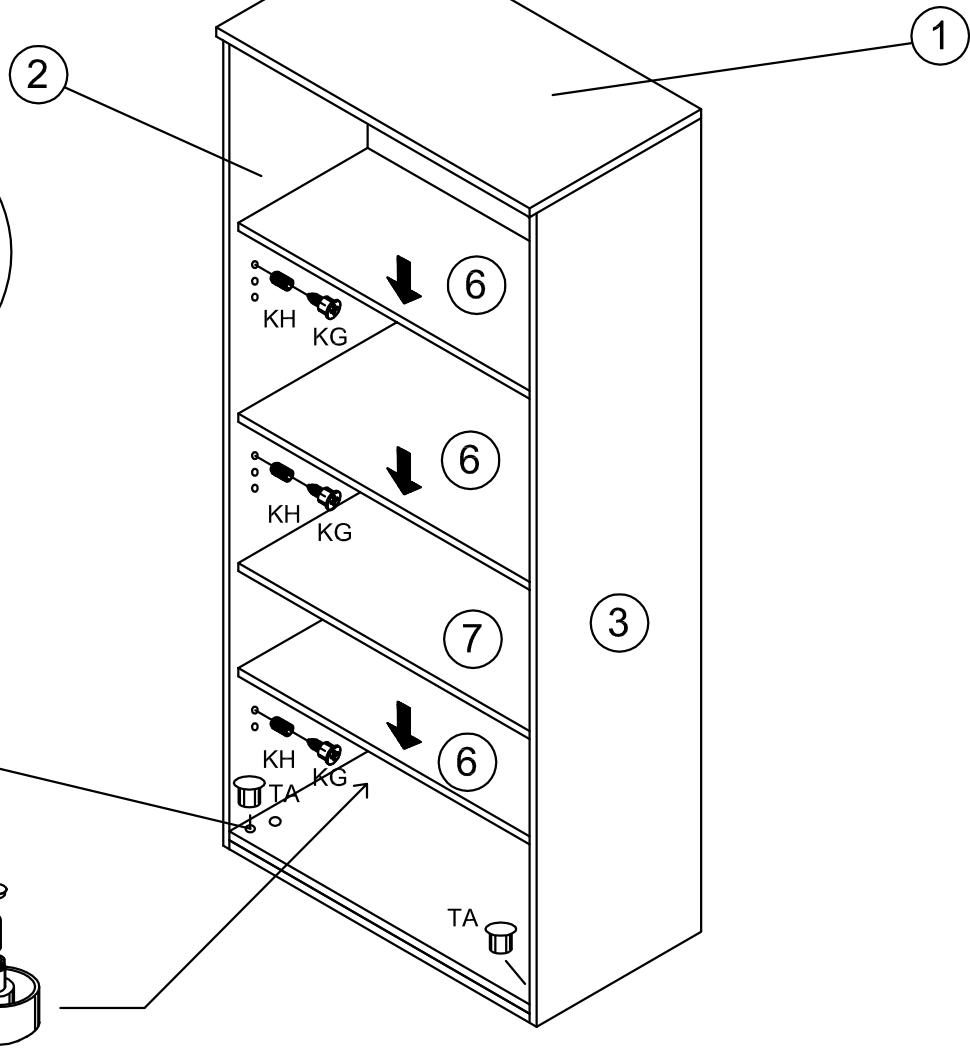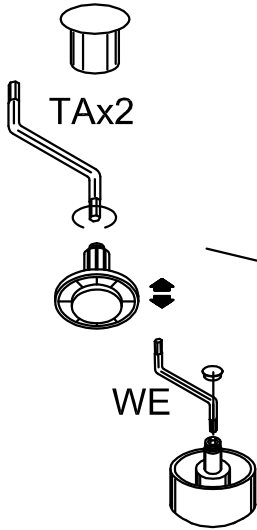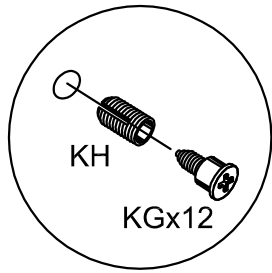

7

