
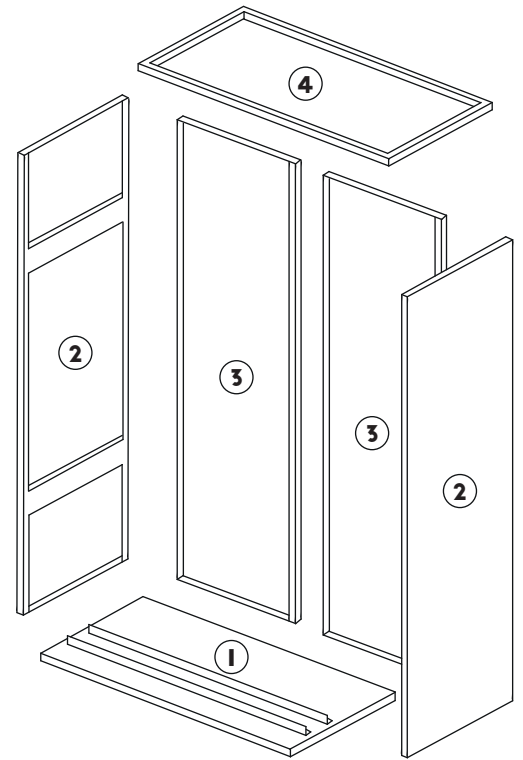
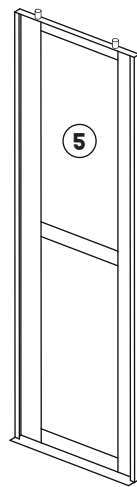



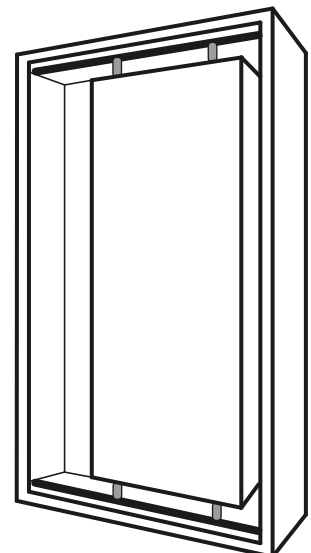
## ISTRUZIONI DI MONTAGGIO ASSEMBLY INSTRUCTIONS


# SL 601 602 603

armadio  
closet




		601	602	603
<b>A</b>		<b>24</b>	<b>28</b>	<b>28</b>
<b>B</b>		<b>16</b>	<b>18</b>	<b>18</b>
<b>1</b>	BASE / BASE	<b>1</b>	<b>1</b>	<b>1</b>
<b>2</b>	FIANCATE / SIDES	<b>2</b>	<b>2</b>	<b>2</b>
<b>3</b>	SCHIENALI / BACK	<b>2</b>	<b>2</b>	<b>2</b>
<b>4</b>	COPERCHIO / TOP	<b>1</b>	<b>1</b>	<b>1</b>
<b>5</b>	PANNELLO SCORREVOLE SLIDING PANEL	<b>1</b>	<b>2</b>	<b>3</b>




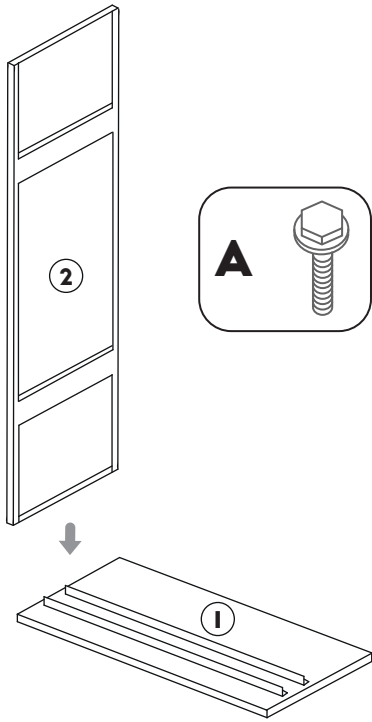

1

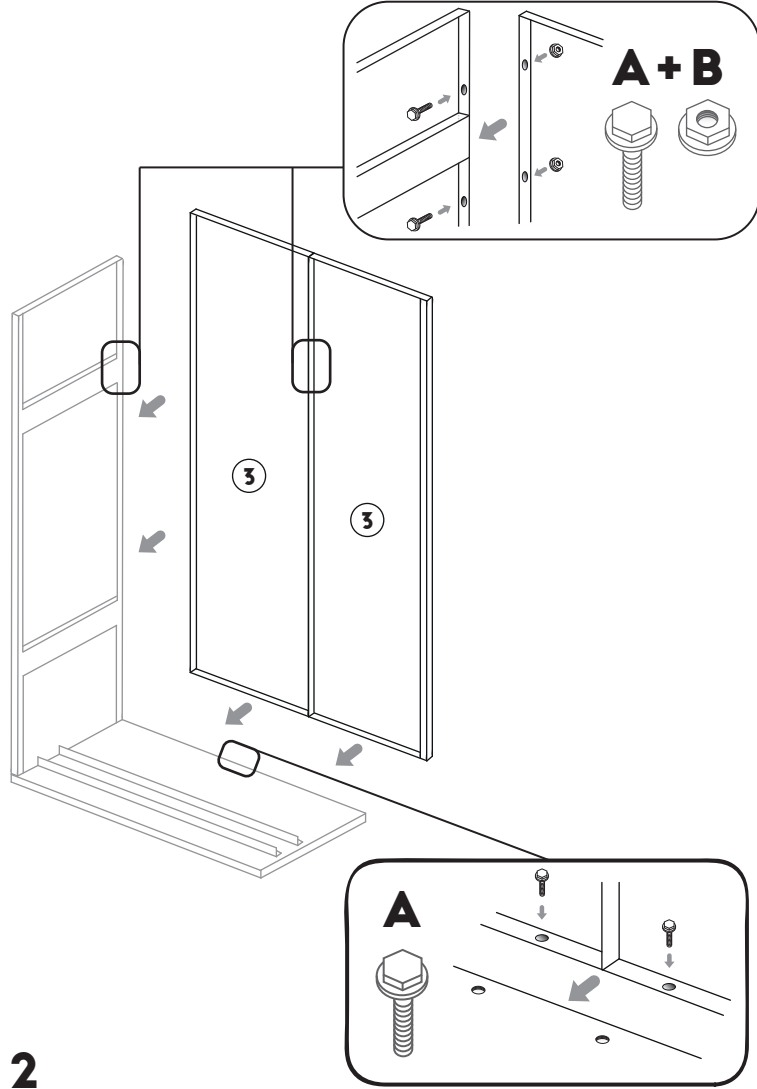




2

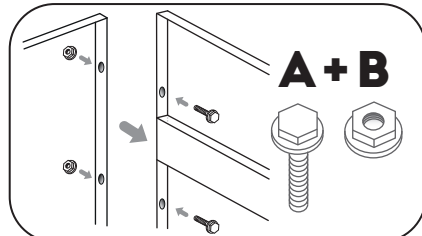


3

4



**!**  
**INSERIRE MULTIBOX**  
**INSERT MULTIBOX**

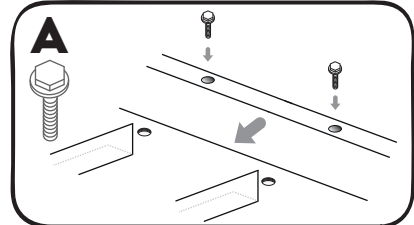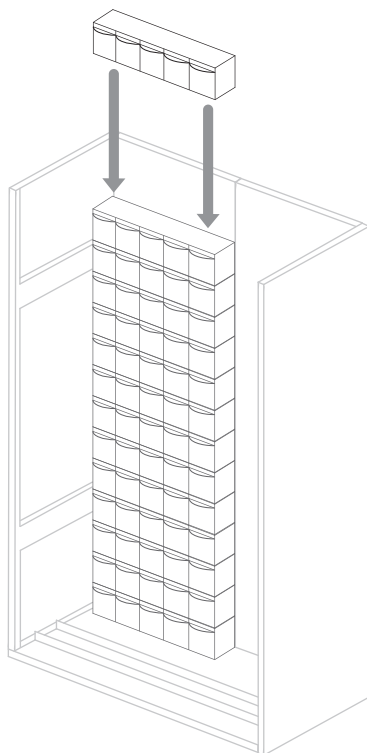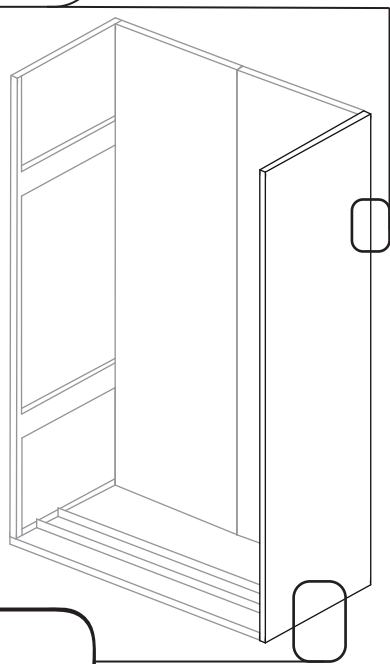

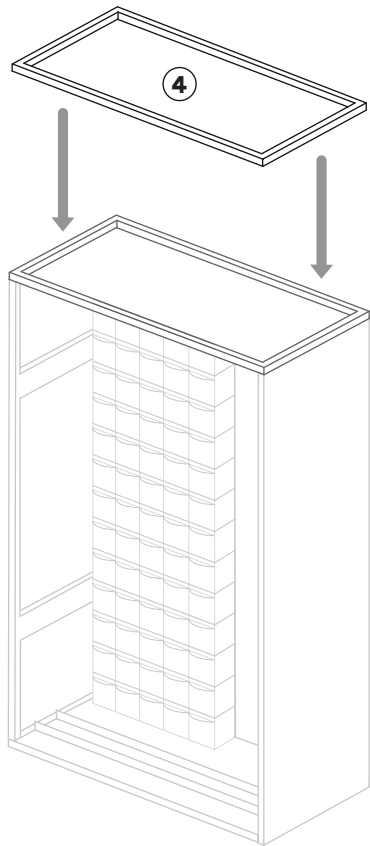

5

6

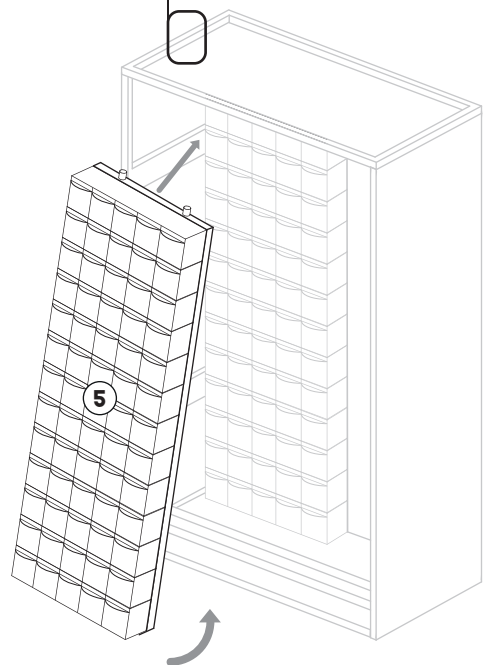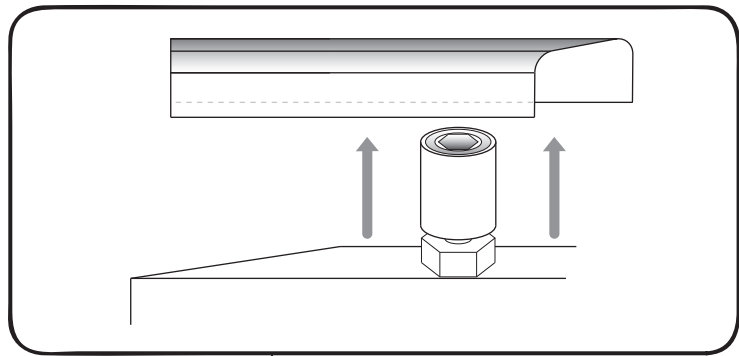

  
INSERIRE I PANNELLI SCORREVOLI  
INSERT SLIDING PANELS