





ISTRUZIONI DI MONTAGGIO ASSEMBLY INSTRUCTIONS


SL 608 609

armadio
closet

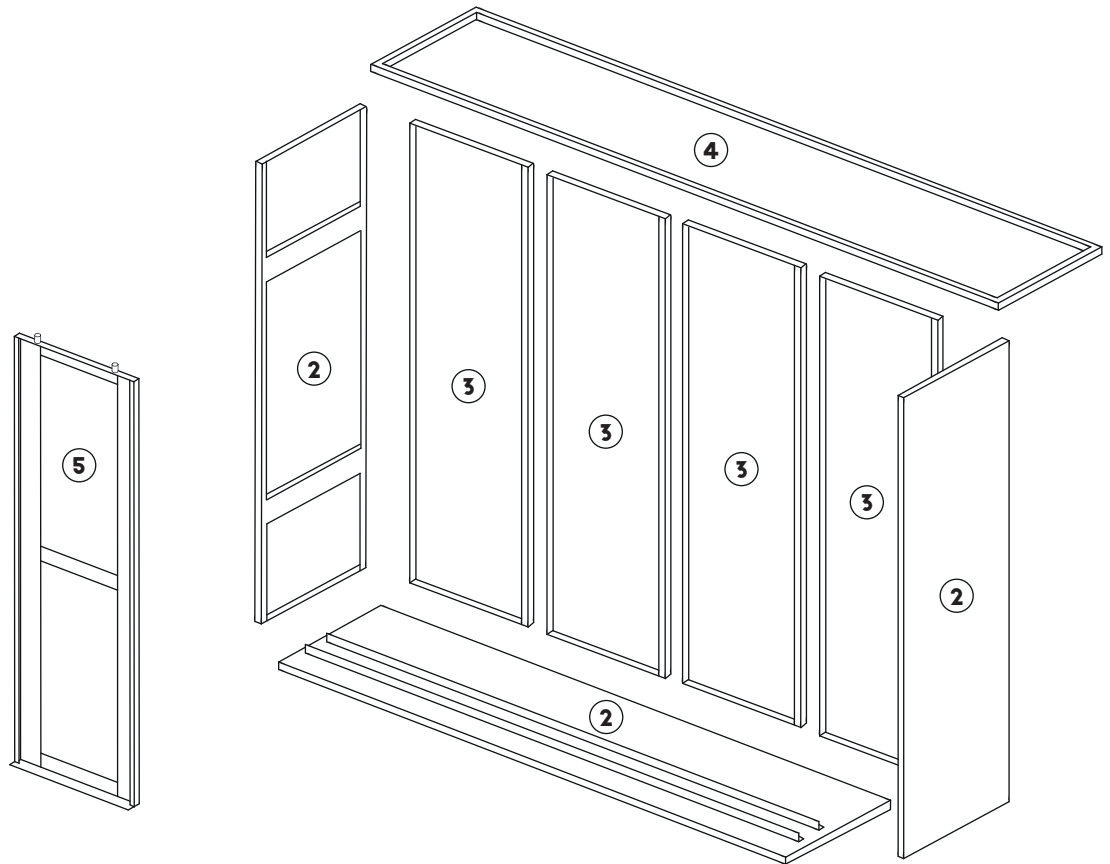


		608	609
A		44	44
B		26	26
1	BASE / BASE	1	1
2	FIANCATE / SIDES	2	2
3	SCHIENALI / BACK	4	4
4	COPERCHIO / TOP	1	1
5	PANNELLO SCORREVOLE SLIDING PANEL	6	9

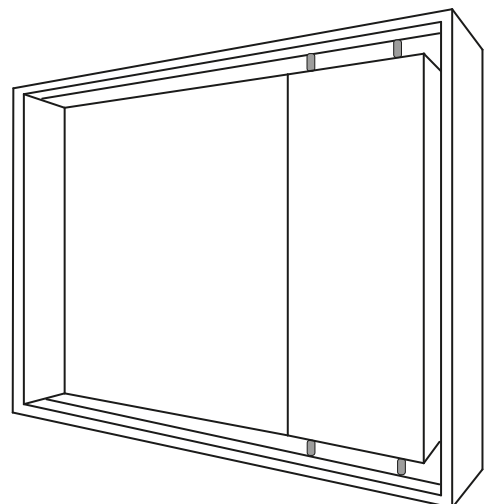


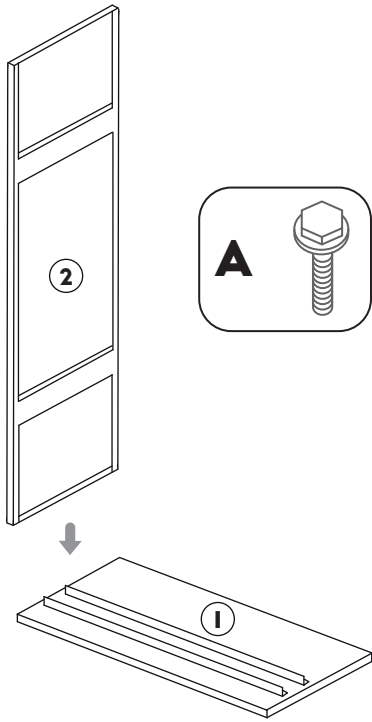

1

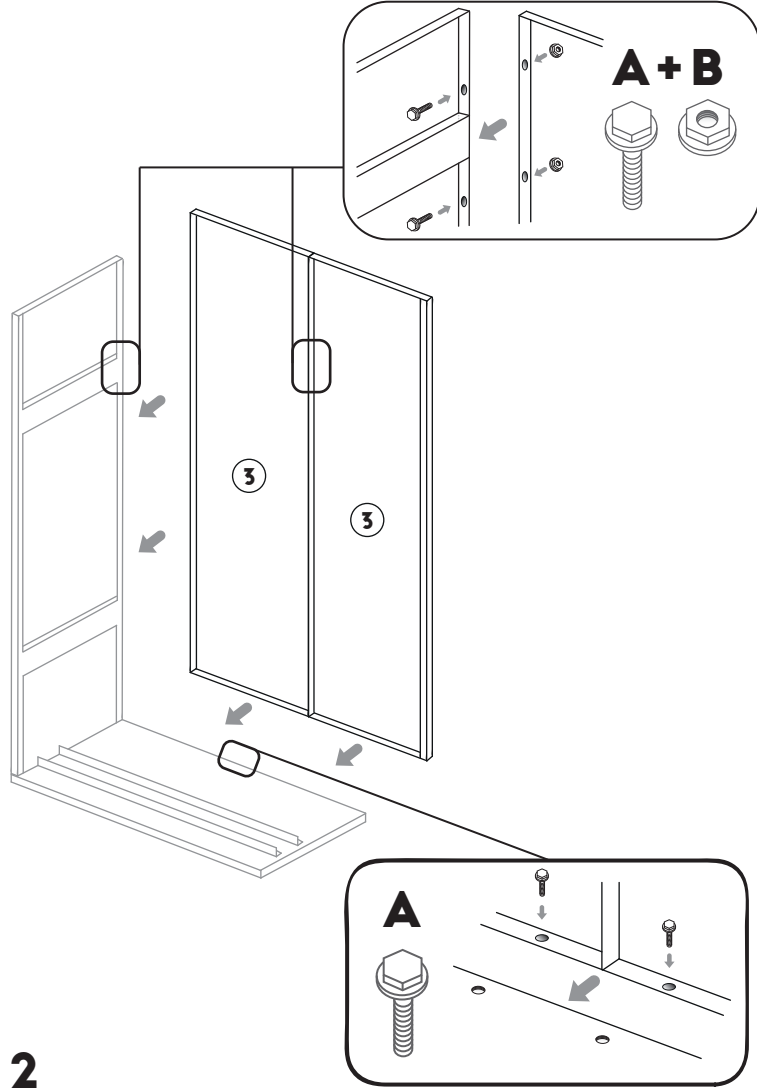




2

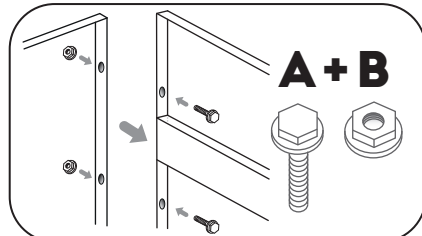


3

4



INSERIRE MULTIBOX
INSERT MULTIBOX

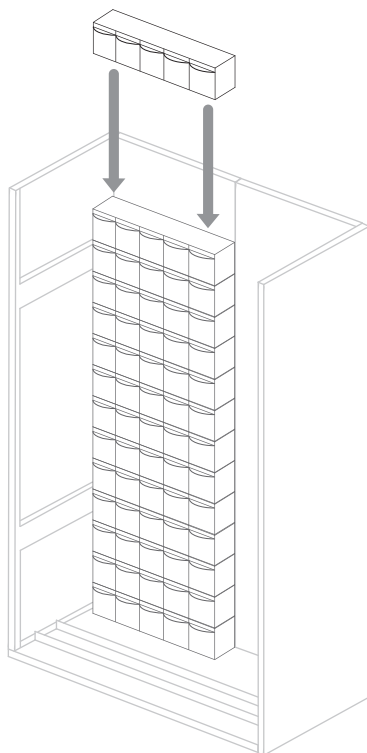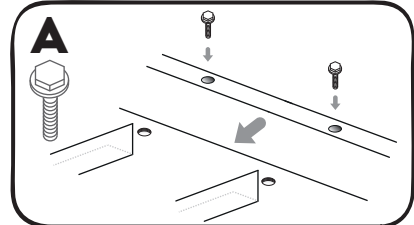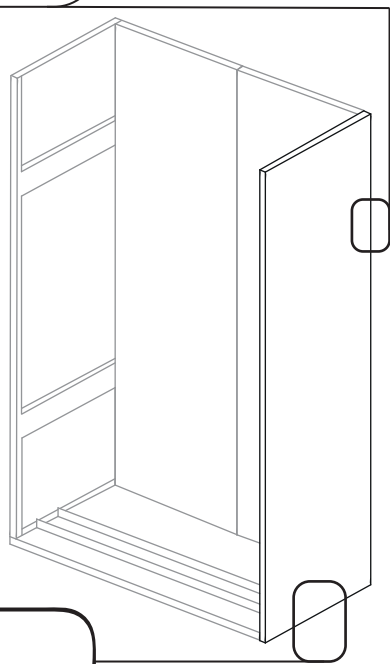

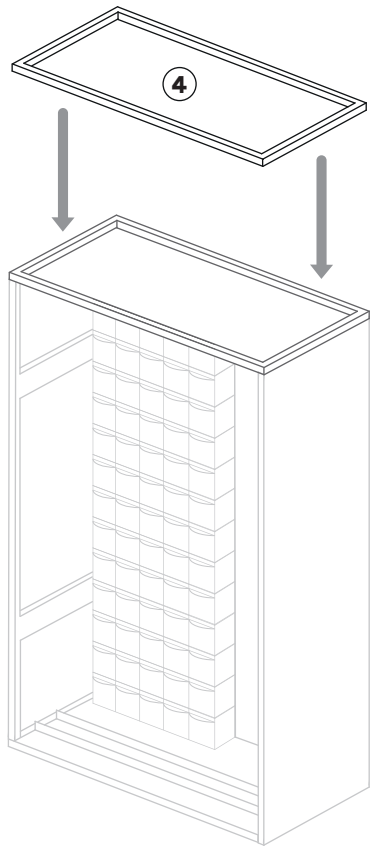

5

6

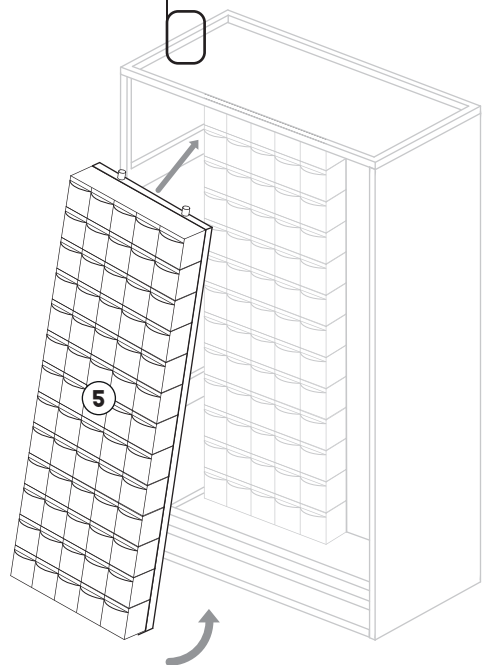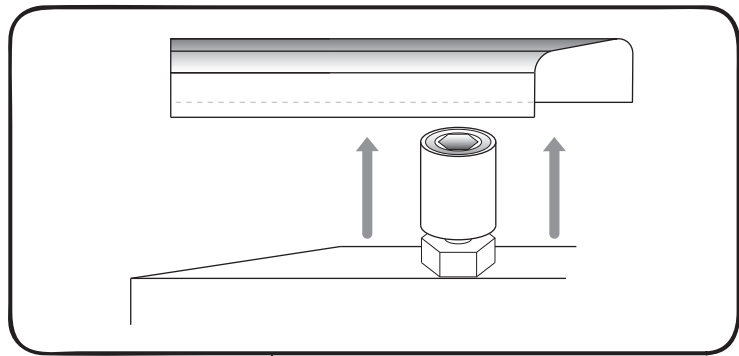


INSERIRE I PANNELLI SCORREVOLI
INSERT SLIDING PANELS